

RELAX ... ENJOY THE RIDE...

The Comprehensive Mechanical Breakdown Protections for Qualified "Previously Owned" Vehicles.

ADVANTAGES

Advantages you have when you own an LDS Policy.

- · Covers cost of parts and labor
- . \$50 deductible on covered repairs
- · Most covered repairs are approved in minutes
- Rent Car & Towing assistance (Policy deductible does not apply)
- Nationwide claims payment (including Canada) via our credit card system
- No out of pocket expenses to you for covered repairs, except for policy deductible and taxes on deductible if applicable.
- Unlimited number of claims
- Policy transfer feature, to second retail purchaser of vehicle, could increase your vehicle resale value
- Inflation may increase the cost of repairs "tomorrow" Protect your investment with "today's" dollars



What is Not Covered:
Coverage is only for the exact parts, which
are listed on the brochure. If a part is not
listed then it is not covered under the terms
of the policy or agreement.

Vehicle Rental Assistance:

When a covered breakdown disables the vehicle and necessitates the covered vehicle being in a repair facility overnight - even applies during factory warranty - not subject to deductible - rental assistance applies. See policy for specific policy coverages.

Towing Assistance:

When a covered breakdown disables the vehicle and necessitates the covered vehicle to be towed - towing assistance applies. Please refer to policy for specific coverages.

Notice: This brochure is a summary only. It is not a policy or agreement. Please refer to the LDS Custom Coverage and Custom Plus Coverage policy for the entire agreement of coverage, as well as the terms and conditions of the policy. The LDS Custom Coverage and Custom Plus Coverage policy is available for your review before making any decisions to purchase.



9016 Bluebonnet Blvd., PO Box 83480, Baton Rouge, LA 70884 Telephone 1-800-272-8000

LDS CUSTOM COVERAGE* & OPTIONAL CUSTOM PLUS COVERAGE* Listing of Covered Parts and Other Features (Adds parts shown in white)

(as shown in black)



ENGINE

Pistons Piston Rings Piston pins Crankshaft Main bearings Connecting rods Connecting rod bearings Oil Pump Oil Pan

Camshaft Camshaft bearings Timing gears, chain, & chain

Valves-intake & exhaust

Valve springs Valve guides

Rocker arms Rocker arm shafts Valve push rods

Hydraulic valve lifters /

tappets Valve covers Cylinder head(s) Intake manifold

Engine mounts Flywheel / flexplate

Harmonic balancer Fuel pump

Turbocharger / supercharger housing & internal parts Seals & gaskets Thermostat

Thermostat housing &

Harmonic balancer bolt Turbocharger valves

Diesel Engine: All of the above listed Engine components (depending on coverage purchased) plus: Vacuum pump Diesel fuel injection pump. lines & nozzles

*The engine block, cylinder walls & sleeves are also covered if the mechanical failure is the direct result of the failure of part covered by the policy.



DRIVE AXLE ASSEMBLY

Ring gear & pinion gear

Bushings Bearings

Spacers Spider gears

Axle gears

Axle shaft Drive shaft

Constant velocity joints

Universal joints

Seals & gaskets Trans-axle housing

Drive axle housing Front & rear hub bearings

Locking rings & locking hubs (4-wheel drive)



TRANSFER CASE

(4X4 VEHICLES)

Bushings

Retainers



COOLING SYSTEM

Water pump & gasket

Radiator fan clutch

Radiator fan motor & relay

Radiator fan blades

Heater core & control valve

STEERING

Steering gear housing & internal parts Steering shafts (internal column) & their

couplings

Cooler & cooler lines

Control valve & cylinder

Main & Intermediate steering shafts



BRAKES*

Power assist booster Master cylinder

Wheel cylinders

Combination valve

Hydraulic lines & fittings

Disc brake calipers

Seals & gaskets

Self-adjusters

Parking brake linkage

Anti-lock (ABS) including: module, sensors &

hydraulics

*Brake pads, shoes, rotors and drums are not covered at any time or for any reason.



FRONT SUSPENSION

Control arms, shafts & bushings

MacPherson struts (excluding shock cartridge failure) MacPherson strut upper mount & bearing assembly

Upper & lower control arms

Upper & lower ball joints

Steering knuckle (spindle)

Stabilizer shafts, linkage & bushings

Wheel bearings & seals

*Front end alignments are covered only when made necessary as the result of the repair or replacement of covered parts, according to manufacturers' repair procedure.



ELECTRICAL

Alternator Voltage Regulator

Starter Motor

Starter

Solenoid

Distributor (excluding cap & rotor)

Electronic Ignition Module

Engine Command Control Module

Windshield Wiper Motor (front only)

Rear Window Wiper Motor

Manually Operated Switches (excluding audio &

visual display systems)

Wiring Harnesses

Back Glass Defroster Element (glass breakage excluded)



AIR CONDITIONING*

Compressor

Compressor shaft seal

Compressor clutch, coil bearing & pulley

Condenser

Evaporator core

Accumulator/drier

Seals & gaskets

A/C Idler pulley

Air handling power module

A/C High / low cut-off switches

A/C Pressure cycling switch

A/C Heater blower motor

Expansion valve - A/C

Orifice - A/C

Automatic temperature control

programmer

*Replacement of freon and refrigerant oil is covered only when made necessary as the result of the repair or replacement of covered air-conditioning components.



HIGH-TECH

Power seat motors & gears

Power window motors & motor gear

Power antenna

& retainer clips

Digital touch entry control unit

Electronic air suspension

Thermometer read-out

Electronic cruise control

Fuel tank & lines

EFI-Electronic gas fuel injection system

Electronic spark control detonator sensor

Electronic instrument cluster

Outside power mirror adjusting motors Power sun roof motor

Convertible top motor

* If a part is not listed above, it is not covered.

TRANSMISSION

Automatic Transmission: Bearings

Bushings Gears

Shafts Clutch plates Friction & Steel Drums

Oil Pump Servo units

Rings Governor

Torus units Torque converter

Valve body & valves Modulator Mounts

Seals & gaskets

 
Bearings Bushings Shafts Spacers

Main drive gear Main shaft

All internal gears (excluding odometer driven gear)

Mounts

parts, seals & gaskets



Synchronizers

Seals & gaskets

Transfer case, all internal

Power steering pump Seals & gaskets